

Aqua Grain Base Coat

Aqua grain base coat is a premium quality self crossing waterbased acrylic wood finish with excellent penetration and sealing properties.




WATER BASED

PRODUCT BENEFITS


- Excellent penetration
- Ecofriendly
- UV resistant

PRODUCT FEATURES

AVAILABLE PACKS



COVERAGE

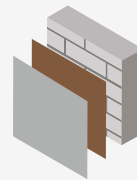

Coverage- 14-16 Sqm per lit per coat*

Actual coverage may vary from the quoted coverage due to factors such as method & condition of application and surface roughness and porosity.

AREAS OF APPLICATION



Interior & Exterior of Timber, Decking, Fascia, Doors, Wooden frames, Windows, Wooden structures, Furniture.

HOW TO APPLY

SURFACE PREPARATION

Ensure that timber to be painted is clean and dry. Carry out sanding along the grain marks using fine sand paper. Dust off entire area to be painted. Fill surface imperfections like nail holes and cracks etc by suitable filler. Sand smooth surface using fine sand paper and dust off.

APPLICATION PROCESS

- Stir the contents thoroughly before and during use. Apply uniformly direct from the container after proper surface preparation.
- New Timber: Allow timber to condition for 1.5-2 months. Apply one coat of Aqua Grain Base coat followed by light sanding after drying and then apply two coats of Aqua grain top coat.
- Previously painted Timber: Painted surface to be sand to bare timber with uniform dust free surface. Apply one coat of Aqua Grain Base coat followed light sanding after drying and then apply two coats of Aqua grain top coat.
- Oil Stain Timber: Remove stain by using suitable cleaning agent, apply one coat of Aqua grain base coat followed by light sanding after drying and then apply two coats of Aqua grain top coat.
- Old, fungus, algae affected Timber: remove fungus and algae with suitable cleaning agent and Sand timber back to bare wood surface, remove sanding dust and apply one coat of Aqua grain Base coat followed by light sand after drying and then apply two coats of Aqua grain top coat.
- For High Humid, Tropical areas, wood to be suitably treated and then apply aqua grain top coat.
- Caution: Allow enough time for proper curing of paint film

ADDITIONAL INFORMATION

DRYING TIME

TOUCH DRY



30
MINUTE

RECOAT



4 hours
Recoat

Gloss @ 60°:

Low Sheen - 8-15 unit

Method of application: Brush, pad applicator and Spray.

SAFETY PRECAUTION

- > Do not apply when surface temperature is below 10°C.
- > Provide adequate ventilation during use.
- > Keep out of reach of children.
- > Check cross cut adhesion of old paint before repainting.
- > Under normal conditions a week's curing is required to develop full hardness & resistance properties.

SAFETY INFORMATION

- > If swallowed give water to dilute. Do not induce vomiting. Get medical attention.
- > EYES: Hold open and flush with running water for at least 15 minutes.
- > Skin: Remove contaminated clothes and wash skin thoroughly with soap and water.
- > Inhalation: Remove to fresh air. If any symptoms persist, seek prompt medical attention.
- > Thinner / Cleanup - Water